


FITTING GUIDE

IS8010 AUTOMATIC DROPDOWN SEAL

LIT-FG-IS8010

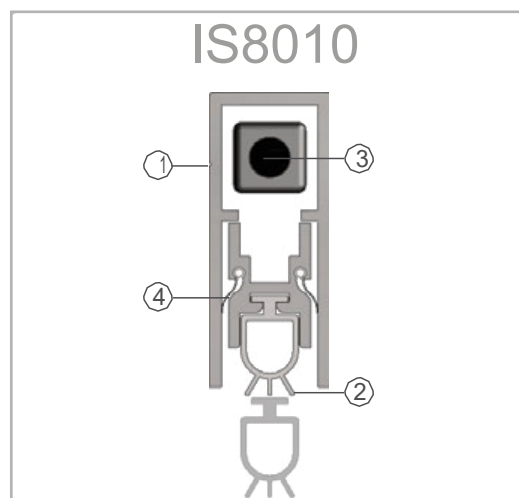

DESCRIPTION OF CONTENTS

- Aluminium Housing (1)
- Silicone Gasket (2)
- Actuator Button (3)
- Smoke Fins (4)
- Bag containing
 - 2 x End plates
 - 2 x Screws
- 1 x Striker Button
- Fitting Instructions

TOOLS REQUIRED FOR INSTALLATION

- Tape Measure
- Saw(Power or Hand) Screw Driver
- 2.5mm Drill Bit
- Drill (Power or Hand) Knife
- Pencil or Marker
- Router
- Long Series Router Bit

CUT BACK SIZES:

Do not cut the seal shorter than the lengths indicated below or this will affect the normal operation of the internal mechanism

- 380mm cuts to 275mm
- 600mm cuts to 380mm
- 820mm cuts to 600mm
- 920mm cuts to 820mm
- 1070mmcuts to 920mm
- 1220mmcuts to 1070mm

Installation detail: Automatic door bottom seal

- | | |
|---------|--|
| Step 1 | Remove the seal from the packaging . |
| Step 2 | Remove the door from its hinges, lay on side and firmly restrain. (If the door bottom is already grooved to suit the seal dimensions, go to Step 5.) |
| Step 3 | Measure and mark the seal position on the bottom edge of the door. For optimum operation, the seal should be positioned on the centre line of the door. |
| Step 4 | Fit a suitable cutter to the router and set guide. Machine a 15mm wide by 35mm deep groove along the bottom of the door. See Figure 1. |
| Step 5 | Clear chips and dust from groove, check width and depth. |
| Step 6 | Warning: Check maximum cut back lengths on the table provided.
Measure the door width. Pull back the gasket from the opposite end to the actuator button and using a power saw / hacksaw, cut the aluminium sections 3mm less than the door width to allow for end plates. Remove cutting swarf. Push the gasket back into position and cut to length with a sharp knife. |
| Step 7 | Position seal in the groove and mark each of the end plate positions on the edges of the door. Cut out with a sharp chisel (or router for round end plates). See Figure 2. |
| Step 8 | Screw fix the end plate and slide the seal into the groove ensuring that the actuator button is on the hinge side. Next, screw fix the remaining end plate to hold the seal in position. See Figure 3. |
| Step 9 | When the door leaf is re-fitted open and close the door observing the operation of the seal. Adjust accordingly by pulling out the actuator button clear of the housing. Firmly holding the threaded rod, turn the actuator button clockwise to reduce movement and anticlockwise to increase the seal movement. |
| Step 10 | (For timber frames, fix the striker button to the frame opposite the operating button.) Note: For optimum results the seal should be adjusted so that the seals silicone gasket touches the sill in the final closing moment of the door. |

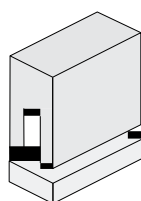


Figure 1

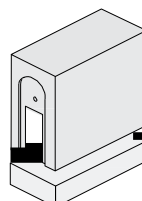


Figure 2

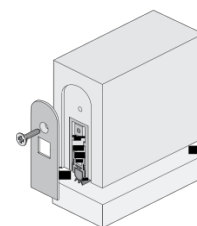


Figure 3

We recommend IS8010si automatic door bottom seal be used together with an Integrity™ 7000 series perimeter seal and, if required a 4000 series threshold plate.

Important:

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.



COASTAL

Shaping the future.