Installation Instructions

1. Recess the Sash Stop into the upper sash stile so the face of the stop is flush with the timber, position this like shown to the right, this would allow 50mm of travel in the sash before the stop would engage the stop plate, *alter this dimension accordingly.

2. Using the Key which is sold separately, unwind the stop, this will unwind to a maximum of 12mm.

wind to a maximum of

Sash Stop
Plate (fixed to top of Meeting Stile)


Frame

Upper Sash


Sash Stop (Position Where Required)

Sliding Sash Section Viewed Internally


Stop Closed

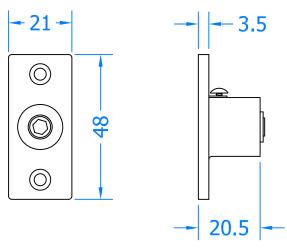

Stop Open

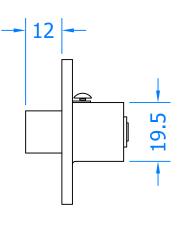

Sash Stop Plate

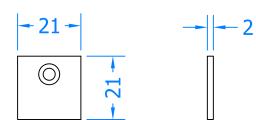



Innovating & Upgrading the Style, Performance & Longevity of External Doors & Windows Globally

Coastal Specialist Ironmongery Ltd.

Global House, Bojea Industrial Estate, Trethowel, St Austell, PL25 5RJ t | 01726 871725 - f | 01726 871731 - e | sales@coastal-group.com

Drawing Title:

SWS0203

Sash Stop on Back Plate

Product Range:

Sliding Sash Window Gear

_	
Additional Info:	
Date Drawn:	17/10/2018
Drawn By:	Phil Walklett
Part Number:	SWS0203
File Name:	CG-SWS0203.dwg
Revision:	A
Drawing Scale:	Not to Scale
Sheet Number:	1 of 1

THIRD ANGLE PROJECTION

ins and wing and specification are he property of Coastal, they are issued in strict confidence and hall not be reproduced, copied or sed without written permission.