

FITTING GUIDE FC6060 ADJUSTABLE FRICTION STAY FOR WINDOWS

LIT-FG-FC6060



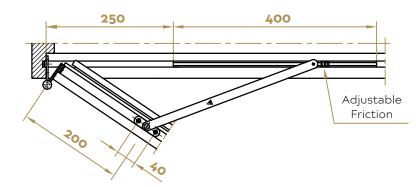

EXAMPLE WOOD PROFILE:

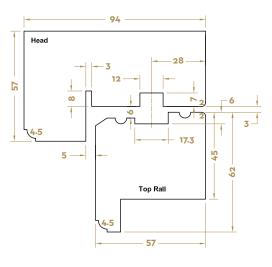

MAINTENANCE:

The fitting are not to be painted. Test the operation from time to time. When mounting - lubricate the pivot/movable metal parts of the mechanism while activating repeatedly.

Herafter lubricate minimum twice a year. Do not lubricate the aluminium rail.

