

# FITTING GUIDE

## MK9-FTB-SP

LIT-FG-MK-FTB-SP

1



MK9-FTB-22-AAL Premium Adjustable Keep.

2



Remove the 2 screws holding on the striker plate.

3



Remove the 22mm centre line striker plate.

4



Take the Stainless Steel MK9-FTB-SP you have purchased, either the 30, 70 or 95mm and locate it on the keep to the required handing.

# FITTING GUIDE

## MK9-FTB-SP

LIT-FG-MK-FTB-SP

5



Take the 2 screws you removed earlier and screw the strike plate into position, these are adjustable.

6



Assembly of the new striker plate is complete.