


FITTING INSTRUCTIONS

Bar Pull Handles Secret Fixing - Aluminium

HAB2 • HAB4 • HAB6 • HAB7 • HAB15

LIT-FG-HAB

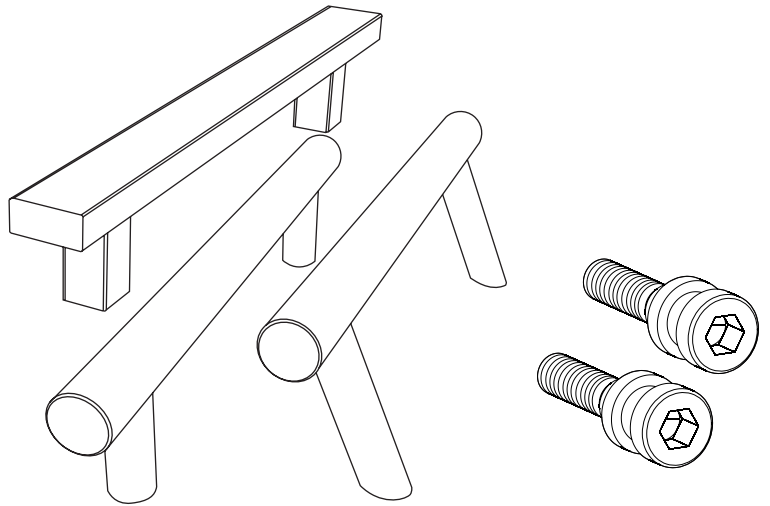

FX-10030 STAINLESS STEEL
FERRULE FIXINGS

STEP 1


Decide where you want the handle on the door.

Note: It is recommended that the fixing holes are at least 100mm away from the door stile edge to prevent the pull handle from hitting the door frame.



The table shows the fixing centre lines based on pull handle total length.

Pull Handle Length	Centres
HAB2, HAB6, HAB7, HAB15	
400mm	300mm
545mm	445mm
600mm	400mm
900mm	700mm
1200mm	1000mm
1500mm	1300mm
1800mm	1600mm
HAB4	
930mm	900mm
1230mm	1200mm

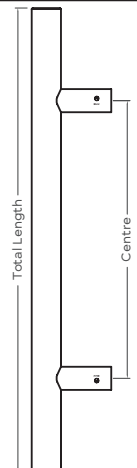


STEP 2

Mark the location of two fixing holes in the door.

Drill two 10mm holes to a depth of 36mm.

Use the handle drawing to find the correct fixing centres.


Note: Do not drill the hole any bigger than 11mm

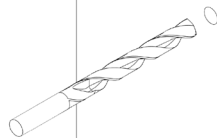

STEP 3


Screw the FX-10030 stainless steel ferrule fixings onto the door until flush. Use an Allen key to tighten.

If using the washer, slide it onto the FX-10030 before screwing into the fixing holes.

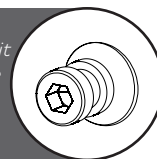

STEP 4

Push the handle into the FX-10030 stainless steel ferrule fixings until the handle sits flush against the door surface.

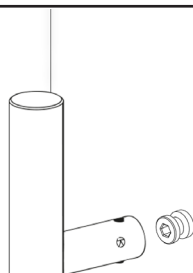

STEP 5

Tighten the two grub screws with an Allen key on both the top and bottom stems to secure the handle in place.

