REVISION HISTORY


Revision Description Drawn Date

A Release PW 17/10/

## Installation Instructions

- 1. Drill 4 holes (2 either side of the window upper sash internally), 2 x 15mm above the meeting stile & 2 x 100mm above the meeting stile using a Ø10mm Drill, 23mm deep.
- 2. Using a large flat head screwdriver, screw in the ferrules into the 4 holes until the head of the ferrules are flush with the timber.
- 3. Now screw in the Sash stop into the required hole location using the Sash stop key SWS42-KEY which is sold separately.
- \* these dimensions can be altered accordingly.


Lower Sash

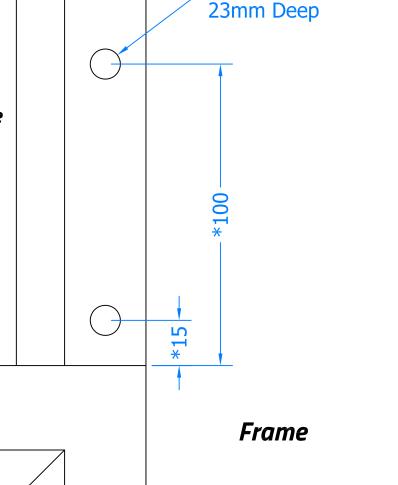


2x Ø10

Sliding Sash Section Viewed Internally

Upper Sash

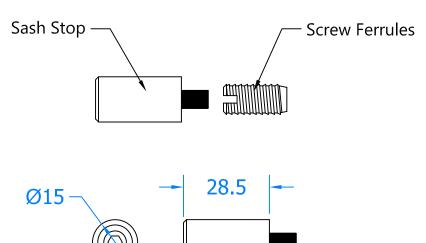





Innovating & Upgrading the Style,
Performance & Longevity of
External Doors & Windows Globally

## Coastal Specialist Ironmongery Ltd.

Global House, Bojea Industrial Estate, Trethowel, St Austell, PL25 5RJ t | 01726 871725 - f | 01726 871731 - e | sales@coastal-group.com

Drawing Title

## SWS42

Circular Detachable Sash Stop

Product Range:

Sliding Sash Window Gear

Additional Info:

Date Drawn: 17/10/2018

Drawn By: Phil Walklett

Part Number: SWS42

File Name: CG-SWS42.dwg

Revision: A

Drawing Scale: Not to Scale

Sheet Number: 1 of 1

THIRD ANGLE PRO JECTION This drowing and specification are

 $\oplus$ 

nis drawing and specification are e property of Coastal, they are sued in strict confidence and all not be reproduced, copied or sed without written permission.