


FITTING GUIDE

DKB195 BLU DOCTORS DOOR KNOCKER

LIT-FG-DKB195

1

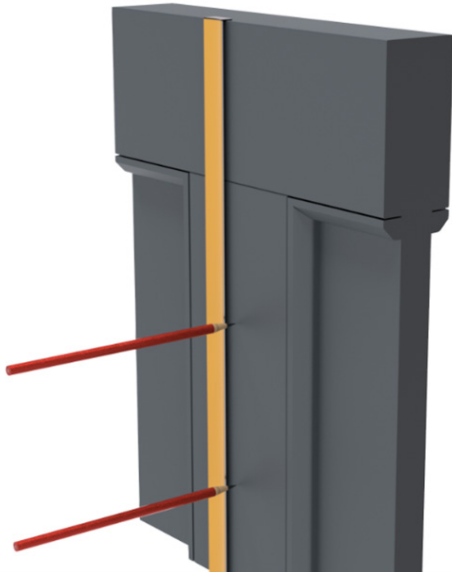

On the outside of the door mark where the top hole needs to be, then underneath mark the bottom hole 121mm below the top hole.

NOTE: To Bolt Fix DKB195 follow Steps 2-6.

To Secret Fix DKB195 follow Steps 7-11.

Bolt Fix Method

2



Using a 10mm drill bit drill holes through the door on the two marks you created in Step 1.

3



Take the M8 bolts and slide on the washers then push the bolts through the door from the inside.

NOTE: you may need to cut the bolts to suit the thickness of your door.

FITTING GUIDE

DKB195 BLU DOCTORS DOOR KNOCKER

LIT-FG-DKB195



Take the impact plate and screw onto the M8 bottom bolt until the impact plate is tight against the door. You can tighten this using a spanner on the bolt from the inside.

NOTE: if the bolt is too long the impact plate will not sit flush against the door.



Locate the hanger fixing plate with the square cut out over the diamond shape on the door knocker then line this up with the M8 bolt. You can then tighten the door knocker to the door using a spanner from the inside, make sure the door knocker is hanging vertically when you tighten it.

NOTE: if the bolt is too long the door knocker hanger plate will not sit flush against the door.



Outside of door



Inside of door

You have now successfully installed the DKB195 door knocker.

FITTING GUIDE

DKB195 BLU DOCTORS DOOR KNOCKER

LIT-FG-DKB195

Secret Fix Method

7



On the outside of the door use a 14mm drill bit to drill holes 20mm deep on the two marks you created in Step 1.

NOTE: holes to be drilled on outside of door.

8



Take the rampa fixings and with an Allen key tighten them into the holes until they are flush with the door.

9



Cut down one of the M8 bolts to 20mm then tighten the bolt into the impact plate until tight.

Take the impact plate then screw the bolt into the rampa fixing until the impact plate is tight against the door.

NOTE: if the bolt is too long the impact plate will not sit flush against the door. Do not make it any longer than 20mm.

FITTING GUIDE

DKB195 BLU DOCTORS DOOR KNOCKER

LIT-FG-DKB195



Cut down the second M8 bolt so it measures 25mm. Take the hanger fixing plate with the square cut out and locate this over the diamond shape on the knocker as shown, then screw in the bolt to the back of the knocker.

Take the knocker and locate the M8 bolt into the rampa fixing in the door. Gently rotate the knocker screwing it into the door until the knocker is a tight fit to the door and is hanging down in the vertical position.

NOTE: if the bolt is too long the door knocker hanger plate will not sit flush against the door.



You have now successfully installed the DKB195 door knocker.